

## A5s – IOS – 飯店模式

- 1)請先記下 A5s 的無線網路名稱，在 A5s 的背面 SSID：Tenda\_xxxxxx
- 2)將 A5s 插上電源，接上來源端的網路線到 A5s
- 3)拿出智慧型手機

### 進入設定，點 Wi-Fi



### 開啟 Wi-Fi



開啟 Wi-Fi 後，會搜尋到 Tenda\_xxxxxx 的名稱



點選 A5s 的 Tenda\_xxxxxx 的名稱



1. 密碼： admin
2. 輸入完密碼，按登入



1. 選 家用模式： PPPPOE(ADSL 撥號)
2. 確定後，按下一步



1. SSID：Tenda\_xxxxxx ←是您的無線網路名稱(wifi)，可以做更改，不能輸入中文。
2. 加密模式： WPA-PSK ；演算法：●AES
3. 金鑰(密碼)：\_\_\_\_\_ ←這裡是您的無線網路(WIFI)密碼，請輸入最少 8 個字元，請勿輸入中文。
4. 確定後，按下一步

1. 以中華電信為範例，帳號、密碼是申請所配發的卡片背面上的帳號、密碼。PS帳號請加上@hinet.net
2. 確定輸入無誤，按下一步

直接按，完成



The screenshot shows the Tenda web management interface. At the top, there is a navigation bar with the Tenda logo and several menu items: 設定精靈 (Wizard), 系統狀態 (System Status), 基本設定 (Basic Settings), 無線網路設定 (Wireless Network Settings), 管理規則設定 (Management Rule Settings), 進階設定 (Advanced Settings), 頻寬管理 (Bandwidth Management), and 系統工具 (System Tools). The '設定精靈' menu item is selected. Below the navigation bar, there is a sub-header with '設定精靈' and a '返回首頁' (Home) button. The main content area displays '設定完成' (Setup Complete) and two buttons: '上一步' (Previous Step) and '完成' (Finish). The '完成' button is highlighted with a red rectangular box. To the right, there is a '說明資訊' (Information) section with three paragraphs of text explaining different connection modes: 飯店模式 (Hotel Mode), 家用模式 (Home Mode), and WDS模式 (WDS Mode).

按完成後，此時，會重新啟動



The screenshot shows the Tenda web management interface during a restart process. The navigation bar and sub-header are the same as in the previous screenshot. The main content area is mostly greyed out, with a central white box containing a progress bar and the text '設備正在重新啟動，請稍後... 51%' (Device is restarting, please wait... 51%). The progress bar is partially filled with a yellow and orange striped pattern. The '說明資訊' (Information) section on the right is also visible, showing the same text as in the previous screenshot.

重新啟動後會斷線。



需要重新連線無線網路，建議先做下底下步驟  
點紅框框箭頭



點忘記此網路設定



按忘記



重新搜尋無線網路名稱，輸入密碼，即可。



The image shows a mobile application interface for entering a password. At the top, there is a dark blue header bar with three buttons: "取消" (Cancel) on the left, "輸入密碼" (Enter Password) in the center, and "加入" (Join) on the right. Below the header is a white rectangular input field with a red border. Inside the field, the Chinese characters "密碼" (Password) are displayed on the left, and a blue vertical cursor is positioned in the center. Below the input field is a virtual keyboard with a dark grey background. The keyboard has four rows of keys: the first row contains Q, W, E, R, T, Y, U, I, O, P; the second row contains A, S, D, F, G, H, J, K, L; the third row contains a left arrow key, Z, X, C, V, B, N, M, and a right arrow key with an 'x' symbol; the fourth row contains a key with ".?123", a "space" key, and a "Join" key.